

The AirPen® Piping Dispenser - Instructions


Screw on airline (K) and connect the power adapter (J) to pump as shown.




Place a storage cap (D) onto the end of cartridge (A) to retain contents. Pipe contents into cartridge to about 2/3 full. Insert a 'follower' (B), solid end first, into cartridge. Use the puller tool (H) to gently compress contents into the cartridge.



Hold black housing in one hand, as shown. With the other hand, twist filled cartridge into the housing clockwise using a downward twisting motion to screw into housing.

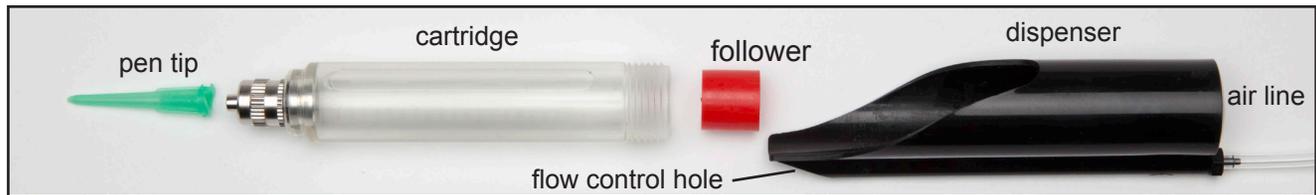

Plug power adapter into outlet [for specific plug configurations, attach appropriate, locally-available device to this plug for universal compatibility] and push red button to turn on pump.

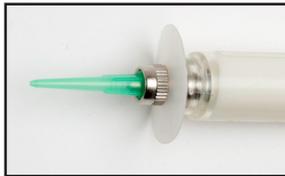

Remove the storage cap and twist on a green dispensing tip (C). Note: always ensure that tips are clean and tip openings are clear (you should be able to see light through them) before placing onto cartridge.

For drop string work, insert clear air shield (L) over the metal knurled band.



The AirPen® Piping Dispenser is now ready to use and should be held with the tip pointing downward so contents do not flow back into the air passages.

To begin flow, first touch the dispensing tip onto the desired surface. Then lightly cover the entire area of the flow control hole with forefinger. Lift finger to stop flow. The flow speed is increased/decreased by varying fingertip pressure over the hole, or by changing the tip size.

When not in use, temporarily place the filled cartridges, tips pointed down, into a cup containing a moist paper towel.

To end operation, remove the dispensing tip and replace with a storage cap, then turn off air compressor. Remove cartridge from housing and insert storage plug (E) at open end of cartridge, or clean as noted on reverse.